



# Why the correct grade of Abrasive will work harder for you.

Here's the comparison between **ecoblast** and a commonly used slag abrasive:


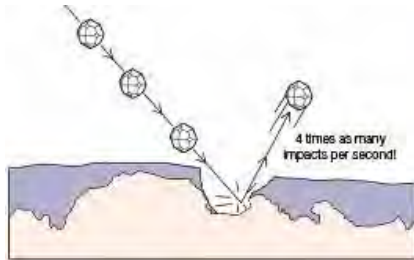


With **ecoblast** the blast stream can carry 4 times the quantity of **abrasive** grains, each carrying tremendous kinetic cleaning power. The smaller grains also scour out deep into the pits and leave a cleaner surface, faster.

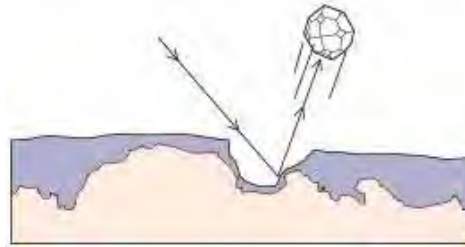


With commonly used **coarse abrasive** it is very hard to clean out the pits without using a lot of abrasive.

Each grain of **ecoblast** carries energy for cleaning!

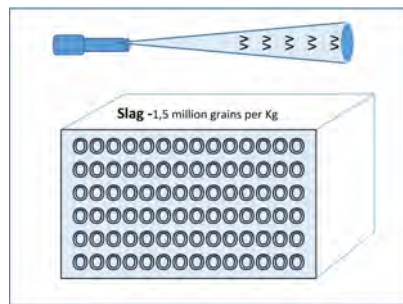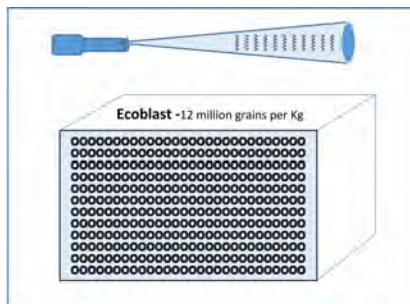

You should also ask yourself  
"How much Abrasive should I use each hour?"

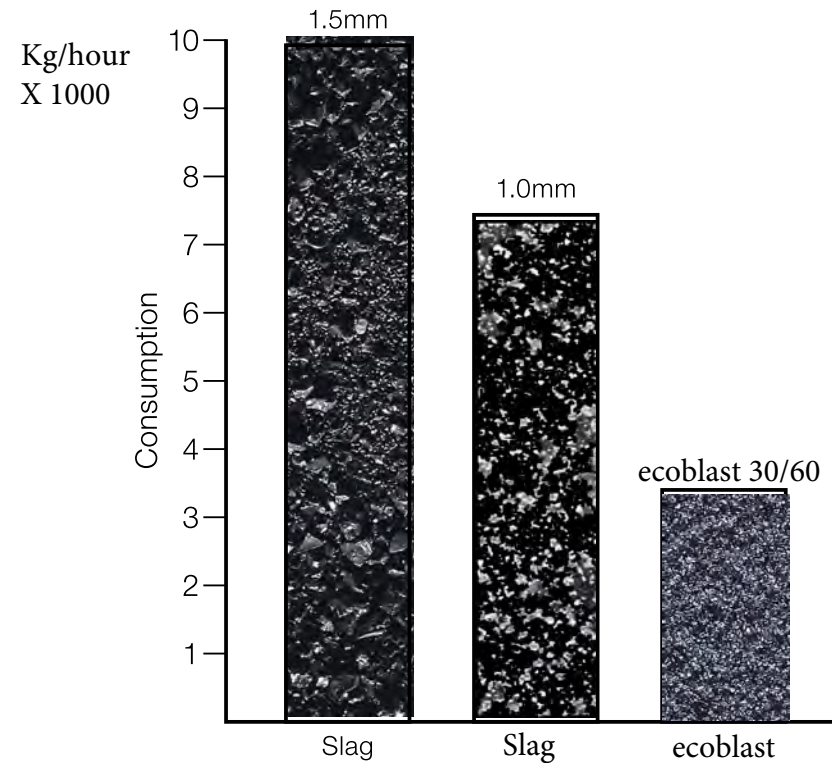

**ecoblast is designed to meet paint manufacturers specifications for surface profile to maximise dry paint film thickness and improve paint adhesion**